
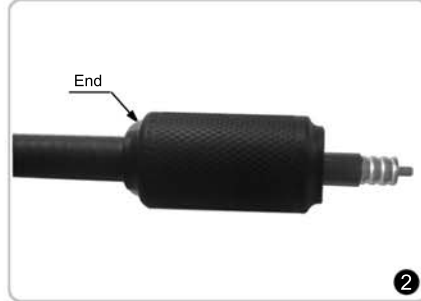


Amphenol

WPS Boot Installation Instruction Before 4.1/9.5&4.3/10 Type Connector Assembly

ITEM:216.1

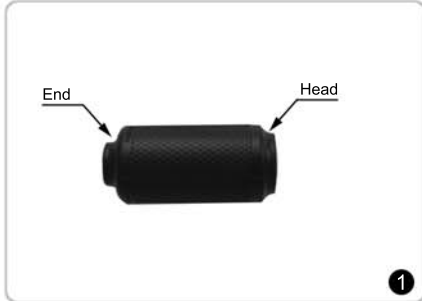

Put on the WPS Boot.



Assemble the connector according to connector installation instructions. The surface of connector should be smooth.



Screw the jumper onto the panel.



Tighten with torque wrench. Recommended torque is 5N·m.



Push on the WPS Boot until the jumper connection part being fully covered.





Finished.


Amphenol

WPS Boot Installation Instruction After 4.1/9.5&4.3/10 Type Connector Assembly

ITEM:2161.1

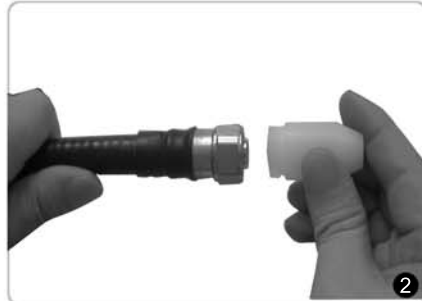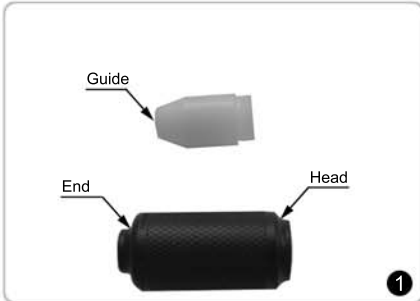

Screw the guide into the connector.

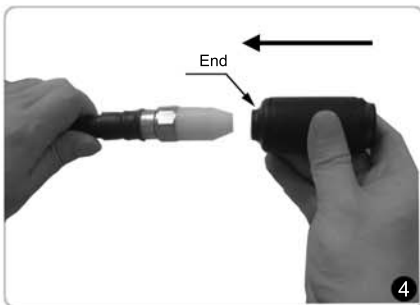

Push the WPS Boot to the jumper via the guide. (The small inner hole towards the cable.)



Take off the guide.



Screw the jumper onto the panel.



Tighten with torque wrench.
Recommended torque is 5N·m.



Push on the WPS Boot until the jumper connection part being fully covered.



Finished.